


## VGA 84 Assembly Instructions

1. Place Desk face down on packaging material or carpeted floor.
2. Assemble Legs using the manufacturer's instructions.
3. Place Leg mounting plates over pre-drilled holes in Desk.
4. Using the #14 x 1" Screws, attach the legs.
5. Place the 2" x 2" Wire Chase where desired. Using the #8-10 x 3/4" screws, attach the chase. There are no pre-drilled holes; The screws are self-tapping and do not require pilot holes.
6. Stand the Desk upright.

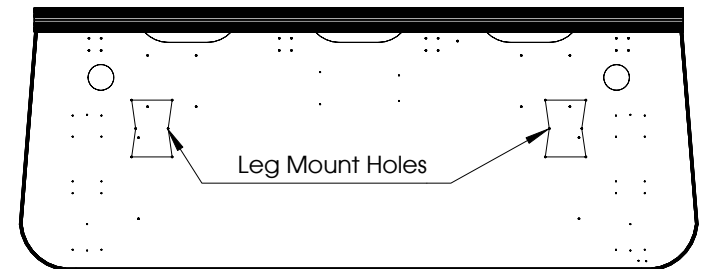

REV	0	REV. DATE	11/01/2012		NOTES			
VGA84 Assembly								
APPROVED					DRAWN BY			
APPROVED					SCALE		SHEET	1 of 1